

Aspen Sideboard
4-Door 760
Assembly | User Guide

K I N G

 **WARNING**








Children have died from furniture tipover.

- ALWAYS secure your television with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

CATEGORY 2

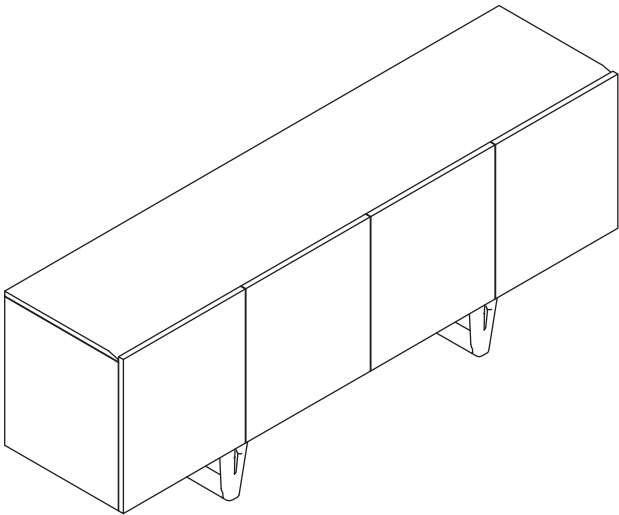

Aspen Sideboard

4-Door 760

Assembly | User Guide

K I N G











Product Care

Two people required for safe assembly

Opening Boxes: DO NOT use a knife to open the packaging as you may damage your furniture. Peel-off the tape, then lift and separate the cardboard flaps to open.


Please follow these Assembly | User Guide Instructions

 Hardware List

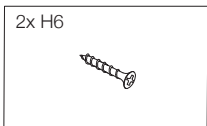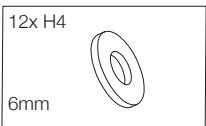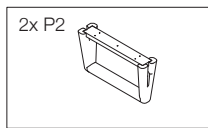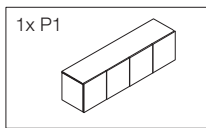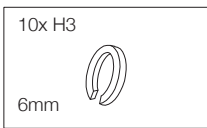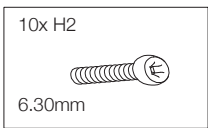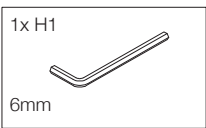

1

Assembly

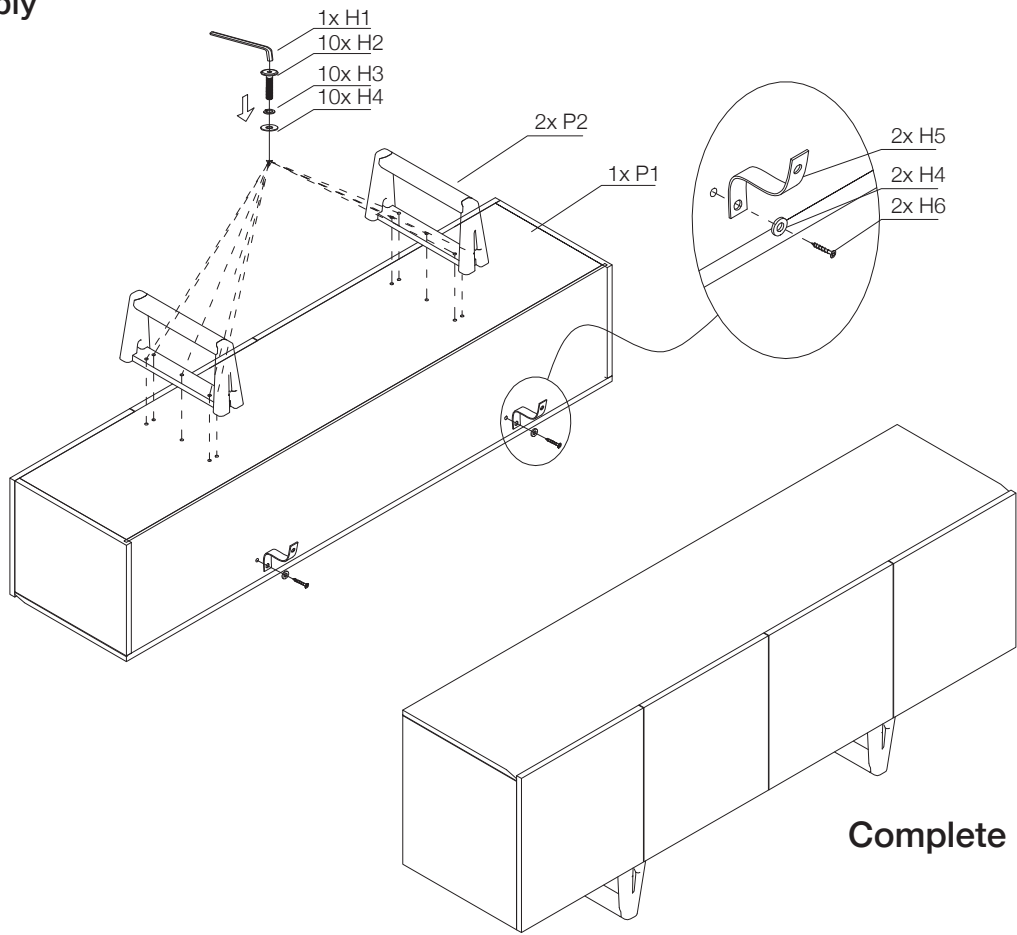

Complete